











Eva Barstool

ASSEMBLY INSTRUCTION


A	B	C	D	E	F	G	Extra Parts	Extra Parts
								
x1	x1	x1	x1	M6x16 x1	x4 M6	x4	M6x16 x1	M6 x1

STEP 1

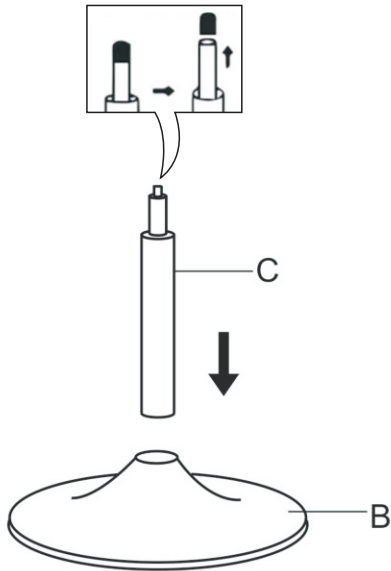


Remove this cap before installation

STEP 2

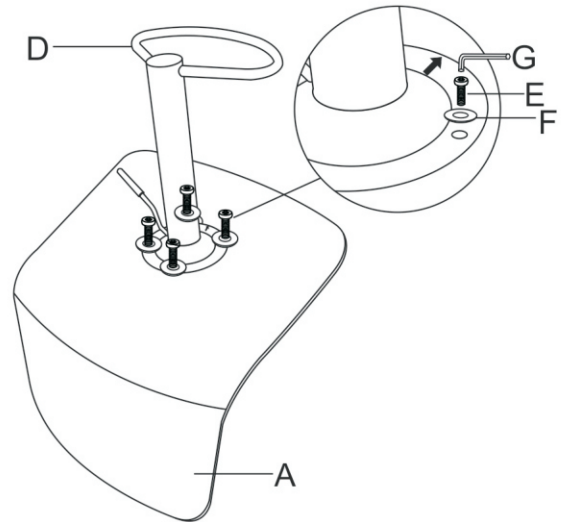

STEP 3

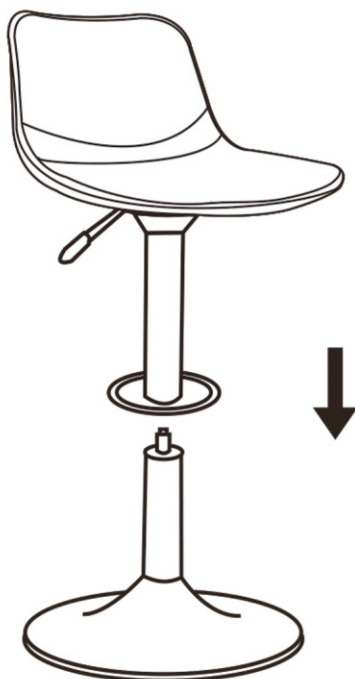

STEP 4

