















# Olivia Chair


## ASSEMBLY INSTRUCTION

<b>A</b>  x1	<b>B</b>  x1	<b>C</b>  x1	<b>D</b>  M8x20 x2	<b>E</b>  M8 x2	<b>F</b>  M6x16 x4	<b>G</b>  M6 x4	<b>H</b>  x1
<b>I</b>  x1	Extra Parts  M8x20 x1	Extra Parts  M6x16 x1	Extra Parts  M8 x1	Extra Parts  M6 x1			

### STEP 1

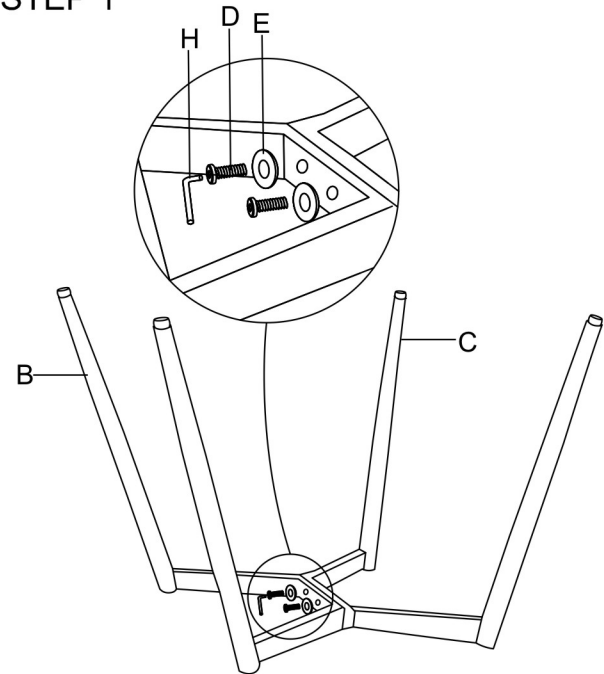


### STEP 2

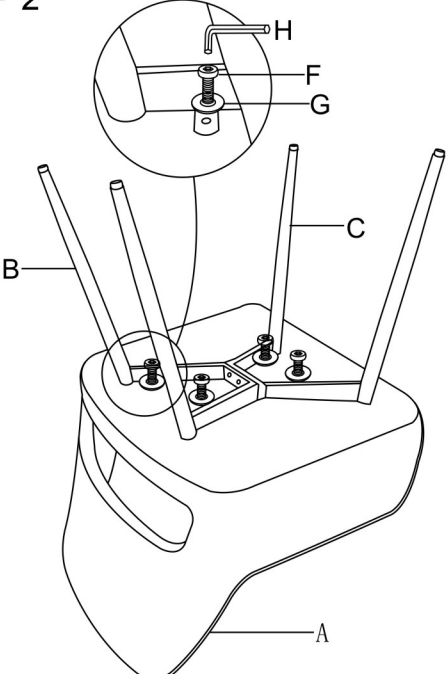

### STEP 3

Adjust the floor protector,  
then tighten the lock nut use I .

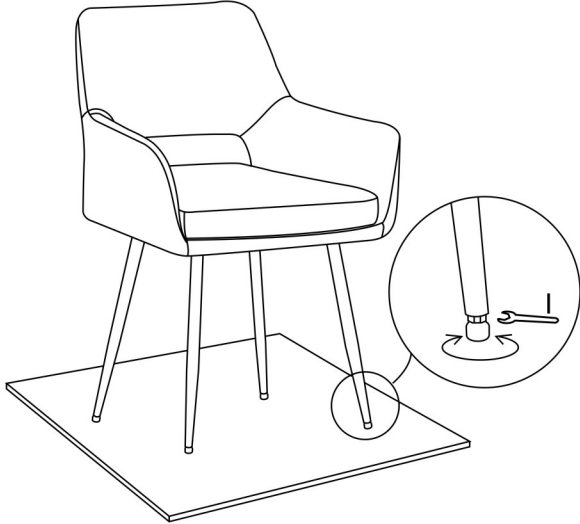

### STEP 4

