















Armchair Joran


ASSEMBLY INSTRUCTION

A  x1	B  x1	C  x1	D  M6x13 x4	E  M6x30 x4	F  x4	G  M4 x1
H  M5 x1	I  x4	Spare Parts  M6x13 x1	Spare Parts  M6x30 x1	Spare Parts  x1	Spare Parts  x1	


STEP 1

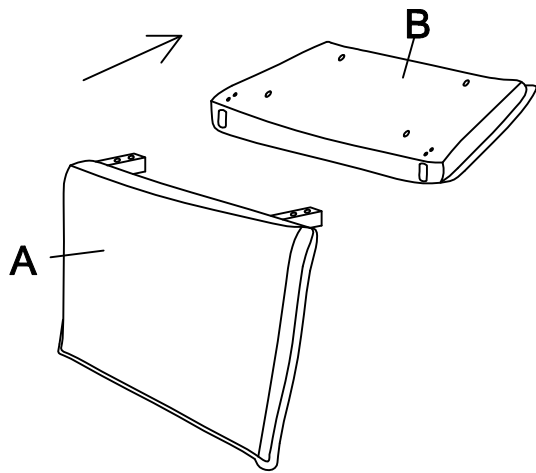

STEP 2

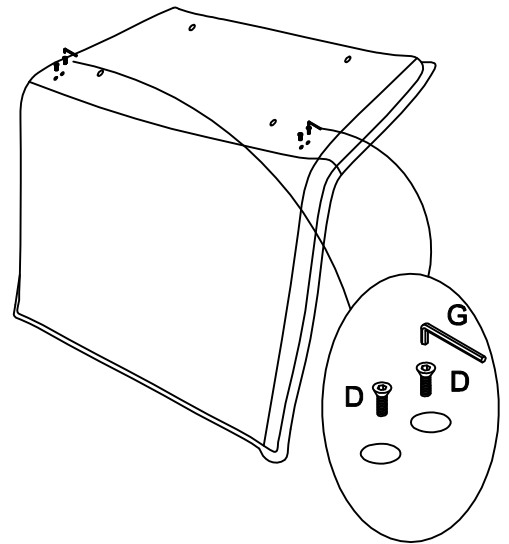

STEP 3

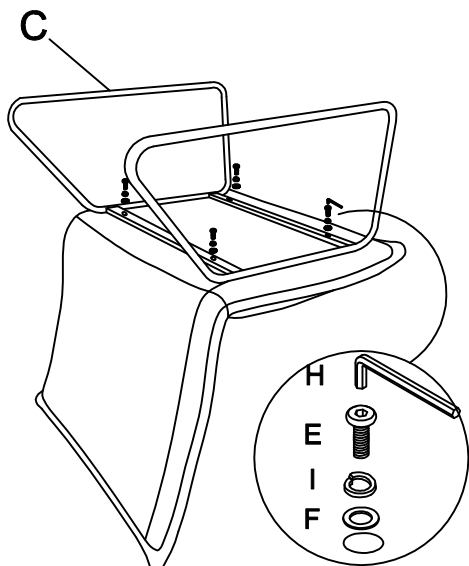

STEP 4

