














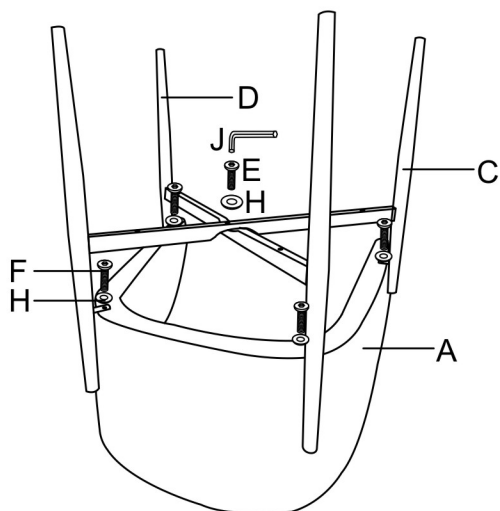


# Dining Chair Bret

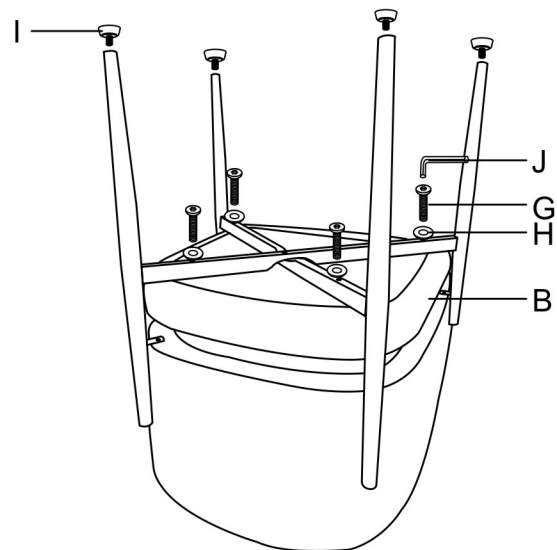
## ASSEMBLY INSTRUCTION

<b>A</b>  x1	<b>B</b>  x1	<b>C</b>  x1	<b>D</b>  x1	<b>E</b>  M6x30 x1	<b>F</b>  M6x35 x4	<b>G</b>  M6x45 x4	<b>H</b>  x9
<b>I</b>  x4	<b>J</b>  #5 x1	Spare Parts  M6x30 x1	Spare Parts  M6x35 x1	Spare Parts  M6x45 x1	Spare Parts  x1	Spare Parts  x1	

### STEP 1



### STEP 2



### STEP 3

